




1. LAY OUT THE PANEL LOCATION.

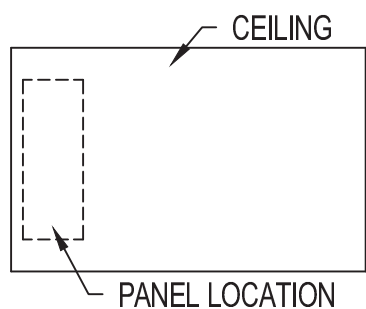


2. DETERMINE EC-2 BRACKET / EC-4 BAR LOCATIONS ON WALL TO LINE UP WITH EC-1 BRACKET LOCATIONS ON PANELS.

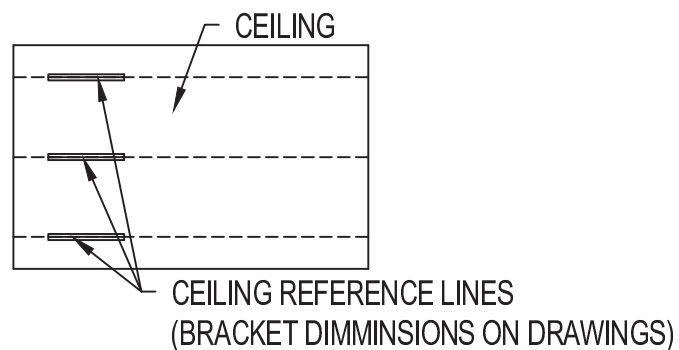

3. SECURE THE EC-2 BRACKET / EC-4 BAR TO THE CEILING WITH SCREWS.

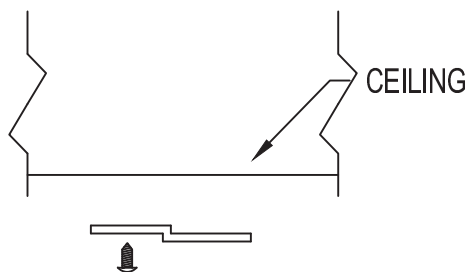

4. SLIDE THE EC-1 BRACKETS ON THE PANELS ONTO THE EC-2 / EC-4 BARS ON THE CEILING.

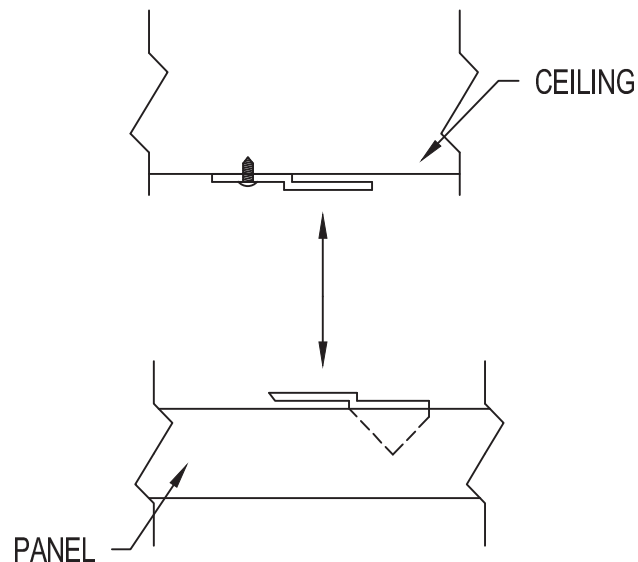

\*APPLY A SMALL AMOUNT OF ADHESIVE ON BOTH PARTS OF THE BRACKETS. THEN SLIDE BRACKET TOGETHER

NETWELL NOISE CONTROL

3800 American Blvd W.

Bloomington, MN 55431

WWW.CONTROLNOISE.COM

(800) 638-9355



EC-CLIP  
CEILING MOUNT