
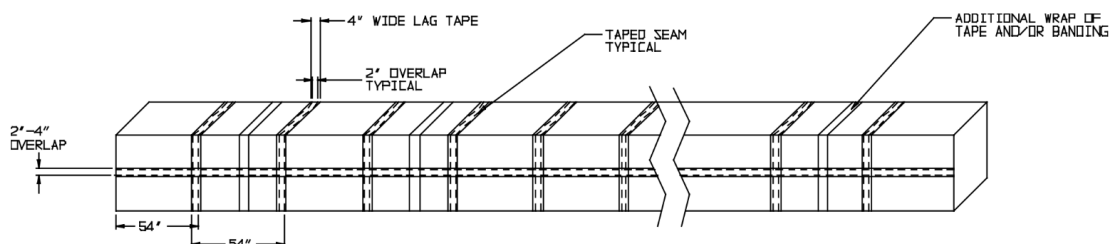


INSTALLATION INSTRUCTIONS

NETLAG RECTANGULAR DUCT LAGGING

- 1 Determine the circumference of the duct to be wrapped. Additional length required to accommodate thickness of material. Add 2–4 inches overlap of product onto itself. *(Note: Quilted Fiberglass side goes up against the duct)*
- 2 Utilizing standard 54" wide rolls, cut length as determined above.
- 3 After cutting piece from roll install first section on the duct. Drape the cut piece over the duct with equal parts of the product hanging over each side. One side is then brought up and adhered to the duct with a foil lag tape. The other side is then brought up, making sure to overlap the first side, and secured with tape. This method allows for circumferential seams approximately every 50" to 52", and a single seam running along the bottom of the duct.
 - On large rectangular ductwork, a mechanical fastener such as stick pins or weld pins should also be utilized, with additional emphasis on supporting product across the bottom to prevent sagging. *(Note: stick pins or weld pins should be placed every 12"–18" depending on cut size)*
- 4 Cut and install the next section in the same fashion. Each progressive section should overlap the previous section by 2 inches (+/-). Tape this seam with a 4" wide foil lag tape.
- 5 In all cases the important element is to assure there are no gaps or leaks whatsoever.

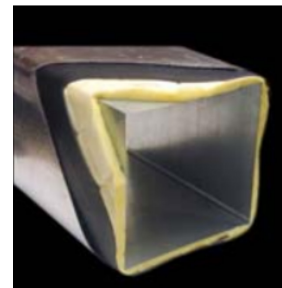

*Stick pins / weld pins to be utilized every 12" - 18" depending on duct size and installer recommendations
(Bottom of Duct Shown)*